

RE-PR3-E-36&54 3-Phase Panel Mount 36 and 54kW



Features:

- 0-10Vdc, 0-5Vdc, 4-20mA or manual via potentiometer control input
- Over temperature protection with auto reset
- Enclosed panel mounting

Benefits:

- Efficient electronic switching
- No additional heat sinks required

Technical Overview

The RE-PR3-E-36 & RE-PR3-E-54 thyristor control assembly's provide full seamless control of 3-phase resistive loads up to 86kW and 105kW, using two thirds control technique. They are controlled by a 0-10Vdc, 0-5Vdc, 4-20mA or manual potentiometer signal.

These burst fire control assemblies use fast pulse, zero volt, switching technology to minimise flicker and eliminate RFI problems.

They also incorporate a temperature trip, automatic reset, alarm output, LED 'output on' indication and heatsink. Applications include electric heater batteries and duct heaters.

Tel: +44 (0) 1732 861200. - **E-mail:** sales@sontay.com. - **Web:** www.sontay.com.

© 2012 Sontay Limited. All rights reserved

Specification:

Input signal	0-10Vdc, 0-5Vdc, 4-20mA or manual via potentiometer
Supply (control)*	24Vac/dc $\pm 10\%$
Supply (load)	3-Phase 400V RMS $\pm 10\%$ 50/60Hz
Power / current ratings:	
36kW	50A per phase
54kW	75A per phase
Fusing	High speed semiconductor (integral):
36kW	63A H/S
54kW	100A H/S
Terminal connections (rising cage):	
Auxiliary alarm	For 2.5mm ² cable max.
Control	For 2.5mm ² cable max.
Power:	
36kW	For 10mm ² cable max.
54kW	For 16mm ² cable max.
Torque settings:	
36kW	2Nm (power terminals only)
54kW	2.5Nm (power terminals only)
Status indicator	(tracking control signal) LED changes intensity
Over temperature:	
Trip in temp.	@ 90°C (194°F) $\pm 1^\circ\text{C}$ (1.8°F)
Trip out temp.	@ 85°C (185°F) $\pm 1^\circ\text{C}$ (1.8°F)
Fault condition	Relay rated at 125Vac @ 2A
Fault status:	
Phase loss	LED flashes, continuous slow pulsing
Sensor loss	LED flashes, on/off fast pulsing
Ambient temperature	65°C (149°F) (maximum)
Dimensions (L, W, H):	
36kW	205 x 155 x 120mm (8.07 x 6.10 x 4.72")
54kW	250 x 155 x 120mm (9.84 x 6.10 x 4.72")
Conformity	CE Marked
Country of origin	UK



The products referred to in this data sheet meet the requirements of EU 2004/108/EC and 2006/95/EC

Part Codes:

RE-PR3-E-36
36kW, 50A Per Phase, Panel Mount Heating Regulator

RE-PR3-E-54
54kW, 75A Per Phase Panel Mount Heating Regulator

Accessories

RE-PR3-F11511
Replacement fuse for RE-PR3-E-36

RE-PR3-F11513
Replacement fuse for RE-PR3-E-54



* PLEASE NOTE

They are factory set for an internal 24V supply, if an external supply is used the dip switch SW4 **must** be changed before power-up.

SAFETY REQUIRMENTS & ADVICE SHEET

Introduction

The objective of this leaflet is to provide information to ensure that the safety of the person(s) installing or maintaining the equipment is not compromised and its location and method of installation does not endanger others, either during or after installation. Customers should be aware of the Health and Safety at Work Act 1974 (HSW 1974) and the EC "Provision and Use of Work Equipment Regulations 1992" (PUWER). Both are available from the Health and Safety Executive (HSE) publications, within the UK.

Installation

CE Directives

These are European regulations which apply to our industry. They affect the equipment emissions and immunity to Radio Frequency Interference (RFI) and various elements of safety for electrical equipment.

The European Community 'CE' Directives that mainly concern Sontay Ltd are the Low Voltage Directive (LVD) and the Electromagnetic Compliance Directive (EMC).

A Declaration of Conformity may be supplied with the product or supplied on request.

Torque Settings

Good working practises must be adhered to ensuring appropriate electrical and mechanical installation. This would include the mechanical fixing of potentiometer bushes and electrical set screw and/or pillar connections. These Electrical Connections and Mechanical Fastenings must not be over tightened. We would recommend a typical torque setting of 1 to 5Nm. For specific product information, see appropriate product data sheet, where applicable.

Cooling Requirements

The use of an additional heatsink (this could be a conductive panel) suitably attached or mounted with the unit, will help to dissipate heat away from the device(s). An alternative or additional method would be forced air-cooling (using a fan), to assist the natural convection of airflow over an existing heatsink within the unit. The product fins should be mounted in line with the forced and/or natural airflow.

The equipment's environment and its initial ambient temperature also need to be considered, as this could have an adverse effect on the overall operating conditions.

Fusing

We recommend that semiconductor, fast acting to BS88 IEC 269, type fuses or circuit breakers (Semiconductor - MCB) should be used for unit and/or device protection. The appropriate maximum load current should be known to select the required SCR fuse or Z curve MCB, but must not exceed the equipment rating. The $I^2 t$ ($A^2 s$) rating of the selected fuse must be less than that of the equipment so as to protect the equipment's discrete device. Further appropriate fusing may be required for protection of the unit supply using standard fuse links and holders. Failure to address these requirements and the use of incorrectly selected fuses may cause the equipment to fail.

Earthing

The protective conductor terminal of the equipment must be utilised at all times and bonded to a 'good' Earth (ground). The earth bonding (strapping) leads of any combined equipment should be as short as possible and be substantial, i.e. at least rated higher than the equipment's load. For further information, refer to BS7671. Following these simple guidelines will ensure optimum use of any appropriate filter circuits which may be required.

Insulation (over-voltage category) and Protection from electric shock Classification of Equipment

All equipment, unless otherwise stated, is rated to CLASS II Insulation (Over-voltage category) and CLASS I (Protection category).

Maintenance

Before any servicing is carried out, reference should be made to appropriate installation instructions, drawings and labelling which may come with the equipment. Personnel should switch off the unit supply before accessing or removing any safety cover and be aware of hazardous live parts.

Tel: +44 (0) 1732 861200. - E-mail: sales@sontay.com. - Web: www.sontay.com.

© 2012 Sontay Limited. All rights reserved

Location & Ventilation:

The power controller is designed for mounting on a vertical panel, with the heatsink fins to the bottom. It is important that free air movement around the heatsink is not restricted. Allow sufficient air space between adjacent units to allow optimum performance of the heatsink.

The maximum ambient of 65°C (149°F) should not be exceeded. Where necessary control panels & enclosures should be ventilated with a fan.

Load Considerations:

Both controllers are designed for 3-wire, 3-phase floating-star or closed delta configured resistive loads. It is a 2-leg thyristor controller and therefore unsuitable for 4-wire, 3-phase with star point to neutral configured loads.

Unusual heating loads such as Molybdenum, Platinum or Tungsten have a typical, 10:1, hot to cold, resistance ratio and therefore, when cold, draw larger currents than normal.

Over Temperature Monitoring:

They are fitted with a thermal protection device to protect against over temperature. The unit will automatically switch off the load in the event of the heatsink temperature exceeding safe limits (90°C (194°F) ±1°C (1.8°F)). Once the temperature has fallen to a safe level (85°C (185°F) ±1°C (1.8°F)) the load will be switched on again if the supply is still present.

Under normal operating conditions the heatsink will not reach 90°C (194°F) but this might occur, for example when the ambient temperature exceeds 65°C (149°F).

Caution: During the course of normal operation metal parts, in particular the heatsink may get very hot.

Control Supply:

Factory set for an internal 24V power supply. If using an external 24Vac/dc supply you must change the DIP switch SW4 on the PCB **prior to applying power**. This is polarity independent.

If there is a requirement for the alarm relay and LED to energise when any of the 3 phases fails, the external, isolated 24Vac/dc supply option must be used.

Earth Connection, Back Up Protection & Load Supply:

The RE **MUST** be earthed. A protective earth connection is provided in the main terminal connections.

Both controllers are protected by internal quick acting semiconductor type fuses.

Load cables must be sized such that they are rated in excess of the fuse ratings.

It is recommended that a load break switch and a contact breaker is installed in the load supply. The supply to the contactor coil should be interrupted by an over-temperature thermostat located in the heater battery and also upon detection of airflow loss.

Fault Conditions, Phase Loss with Auxiliary Supply:

The factory default setting of DIP switch SW1 is the ON position. In this position, the alarm relay will be **energised only when a fault condition occurs.**

Changing SW1 to the OFF position will cause the alarm relay to be **energised continuously until a fault condition occurs.**

If the internal 24V supply is used, a fault condition will occur on over temperature or if the L1 phase only is missing. If an external 24V supply is used, a fault condition will occur on over temperature, temperature sensor failure, or if any of the 3 phases are missing.

Should the 24V supply fail the output of the unit will fail to OFF with no output.

When any one of the three phase inputs are missing, the relay changes state and the LED flashes ON/OFF bursts of 1.5 seconds. Note - This is only true when using an external 24V supply.

When using an external supply the 3-phase power must be turned on before the external (24V) control supply. If the control supply is turned on first, then it will go into phase failure, due to the 3-phase being off.

Alarm Relay:

Where the internal 24V supply is used, the relay obtains its supply from the transformer via two 20mm 1A fuses, and are connected to the L1 and L2 phases. Therefore the alarm relay can only change state when there is an over-temperature condition, a sensor fault, or if the L3 phase only is missing. Alarm contacts are rated up to 2A @ 125Vac (RMS) load.

Manual Control:

The units output can be controlled manually by using a 5k Ω linear potentiometer connected as shown on page 6, **with the input signal set to 5Vdc (SW3).**

Note: A 5k Ω linear potentiometer MUST NOT be connected at same time as an external control signal.

4-20mA Input Signal:

For input current signal of 4-20mA, set DIL switch SW-IV to "ON", fit a 270 Ω , 0.25W resistor across the "+" and "-" signal terminals and set SW3 to 0-5V.

Note: For 4-20mA signal, a 270 Ω resistor is supplied (stuck to underside of cover). Factory-set 'default' setting is 0-10V.

Dip Switch Settings:

SW1 (relay status):

ON = Standard

OFF = Reverse

SW4 (remote supply):

INT = Uses internal transformer (standard)

EXT = External 24V supply

SW3 (control signal):


ON = 0-5Vdc

OFF = 0-10Vdc (standard)


Tel: +44 (0) 1732 861200. - **E-mail:** sales@sontay.com. - **Web:** www.sontay.com.

© 2012 Sontay Limited. All rights reserved


Connections:

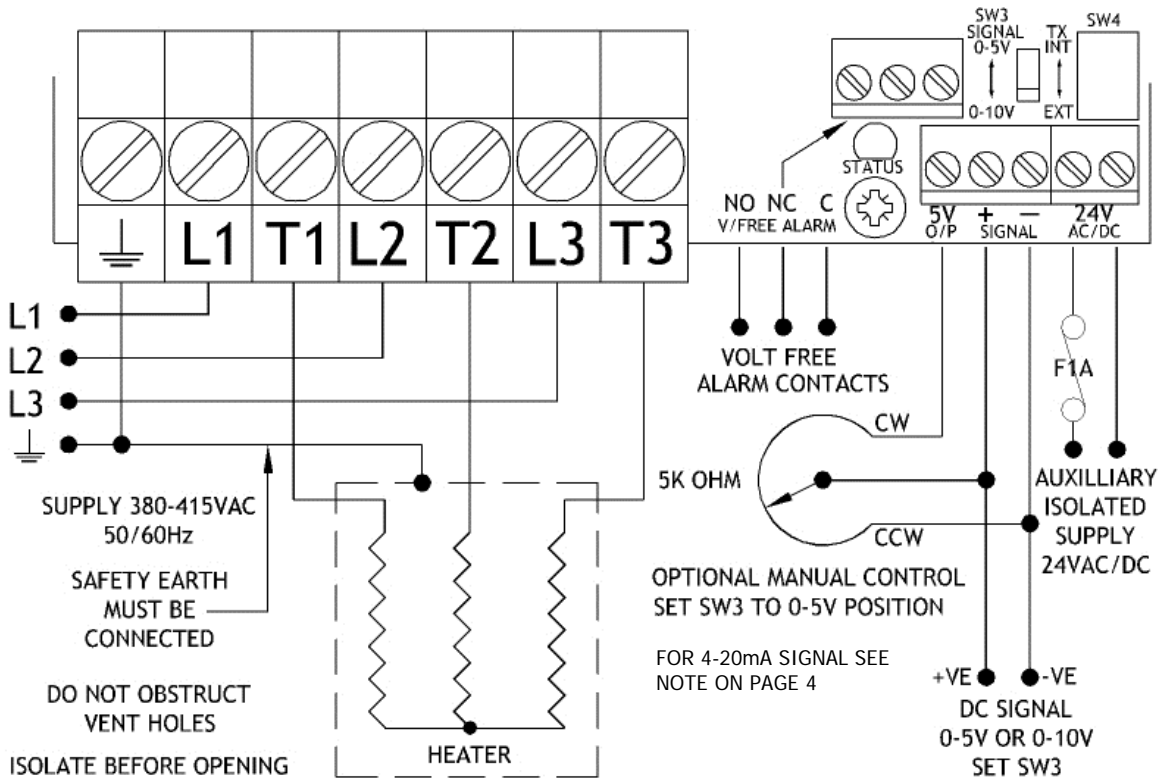

Star configuration:

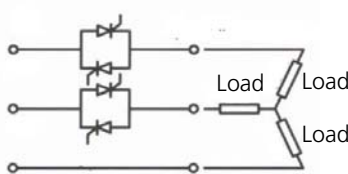

Delta configuration:

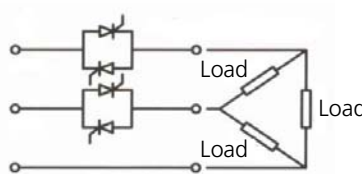

WARNING!

Do NOT connect the neutral to the star point of heater.

Whilst every effort has been made to ensure the accuracy of this specification, Sontay cannot accept responsibility for damage, injury, loss or expense from errors or omissions. In the interest of technical improvement, this specification may be altered without notice.

Tel: +44 (0) 1732 861200. - E-mail: sales@sontay.com. - Web: www.sontay.com.

© 2012 Sontay Limited. All rights reserved