

Air Flow Switch

Features

- Single unit to suit most applications
- Switches 240Vac directly in unit



Specification

Contact Rating:	24-250Vac 15A
Switch:	Dust tight microswitch
Switching:	
Minimum setting	
Cut in	Cut out
2m/s	1m/s
Maximum setting	
Cut in	Cut out
9m/s	8m/s
Dimensions:	113 x 70 x 65mm max plus paddle length
Materials:	
Main Body:	Galvanised steel plate with ABS housing
Paddle:	Stainless steel.
Temperature range:	
Working	-40°C to +85°C
Housing	-35°C to +65°C
Protection	IP65
CE Conformity	EN 60529 (ex IEC 529), protection class I, acc. to EN 60335-1 (ex IEC 335-1).
Country of origin:	Italy

Product Codes

FS-521

Duct air flow switch

Technical Overview

The FS-521 is a paddle switch intended to monitor air flow within ductwork and provide a switch output on detection of either a specific flow rate or flow failure.

Switching sensitivity can be adjusted by means of a calibration screw within the unit. The paddle can be trimmed to increase sensitivity if necessary.

Installation

The switch should be installed in a straight length of duct of 5 x diameter before and after the location of installation to avoid air swirl and paddle instability, and as far away from bends as possible. The arrow on the side of the switch should coincide with the direction of air flow. Care should be taken not to damage the paddle during installation.


The switch can be mounted in any aspect but is factory set for use in a horizontal plane. In vertical installations some adjustment may be necessary to take account of the weight of the paddle and switch arm.

Note:

The units are factory set to the minimum switch-off value. A higher value can be selected by turning the range screw to the right. Due to the risk of fracture at higher air speed than 5 m/s the vane must be cut off on the side where marked. As a result of this, however, the minimum switch-off value as factory set will increase from 1 m/s to 2,5 m/s.

Electrical Connections

Dangerous voltages may exist within this unit. Connection should be carried out by a competent and suitably qualified electrician only. The relevant earthing requirements should be observed when connecting the unit, especially when using higher voltages. Do not over tighten the terminals.

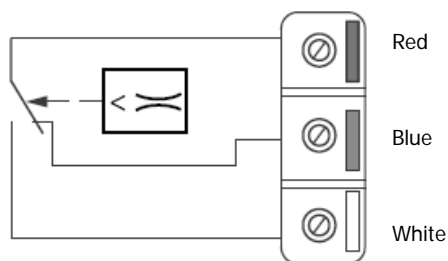

(Diagram during flow presence)

Dimensions

