



Features and Benefits

- Advanced LED indication of faults
- PCB self-test function
- DIN Rail mounting
- Fault finding LED indication
- Alarm output

Technical Overview

The PS-x range of power supply are used to convert 230Vac or 24Vac to a regulated 24Vdc output offering advanced protection, self-diagnostics and self-test facilities. Featuring over-current and over-voltage protection, LED indication of a wide range of conditions, an optional alarm relay output for loss of input and on-PCB reset button.

They are intended for applications requiring auxiliary power for sensors or IO modules.
please contact Sontay Support.

Product Codes

PS-230-24DC-1A	230Vac to 24Vdc power supply
PS-24-24DC-1A	24Vac to 24Vdc power supply (The input and output 0V are NOT common)
PS-24-24DC-E	24Vac to 24Vdc power supply (The input and output 0V are common)

Specification

Input supply	PS-230	240Vac @ 50/60Hz
	PS-24	24Vac @ 50/60Hz
Output supply		24Vdc @ 1A
Fusing:	PS-230	500mA
	PS-24	1A
LED indication:		
		Power ON
		Low output voltage
		High output voltage
		Output voltage within limits
		Reset button pressed
		Self-test in progress
Terminals		Rising cage for 0.5-2.5mm ² cable
Dimensions:		
	PS-230	104x118x 88mm
	PS-24-1A	104x74x65mm
	PS-24-E	104x74x70mm
Ambient:		
	Temperature	-10 to +50°C
	Humidity	0 to 95%, non-condensing
Country of origin		UK
Conformity (PS-230)		EMC, LVD, CE & UKCA Marked
Conformity (others)		EMC, CE & UKCA Marked

WEEE Directive:



At the end of the products useful life please dispose as per the local regulations.
Do not dispose of with normal household waste.
Do not burn.



Installation

1. The PS-x range should only be installed by a competent, suitably trained technician, experienced in installation with hazardous voltages. (>50Vac & <1000Vac or >75Vdc & 1500Vdc)
2. Ensure that all power is disconnected before carrying out any work on the PS-x.
3. Maximum cable is 2.5mm², care must be taken not to over tighten terminals.
4. When mounting the PS-x care should be taken not to stress the PCB when fitting to the DIN rail. If it is necessary remove the module from the DIN rail, be sure to use a flat bladed screwdriver to release the DIN clips.

LED Indication

Switch -On

When the PSU is powered up, the LED shows solid orange for about 0.5 seconds. (If the reset button is pressed during power up, it holds the unit at this step.) After about 0.5 seconds, the output is enabled and the alarm relay closes. This state is held for up to 5 seconds, or until the output voltage has achieved a minimum of 22.0Vdc.

While the output voltage is within bounds, the relay is held closed, and the LED shows solid green. If the minimum voltage is not achieved, the output is turned off, and the relay opens. The LED flashes long-short in orange until the reset button is pressed.

Reset Button


Whenever the reset button is pressed, the LED shows solid orange, the output is turned off and the relay is opened.

Output Out of Limits

If the output voltage drops below 22.0Vdc, the LED flashes short-short in orange. The relay stays closed for a maximum of 4 seconds. If the output voltage is low enough for long enough, the output voltage is turned off, the relay opens, and the LED flashes long-short in orange until the reset button is pressed. If the output voltage rises above 25.0Vdc, the LED flashes short-short-short in red. The relay stays closed for a maximum of 1 second. If the output voltage is high enough for long enough, the output voltage is turned off, the relay opens, and the LED flashes long-short-short in red until the reset button is pressed.


Connections

PS-230-24DC-1A:

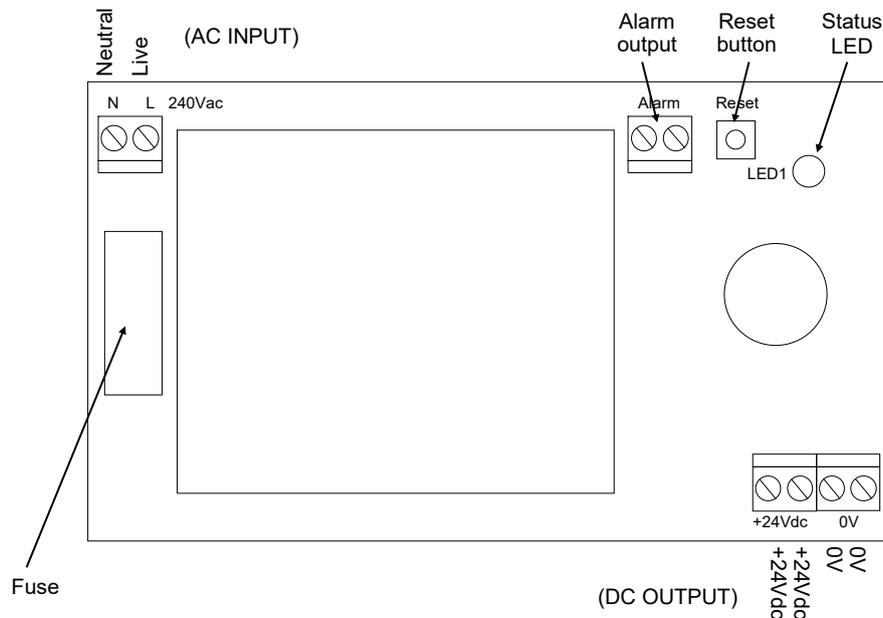


Connections (continued)

PS-24-24DC-1A:

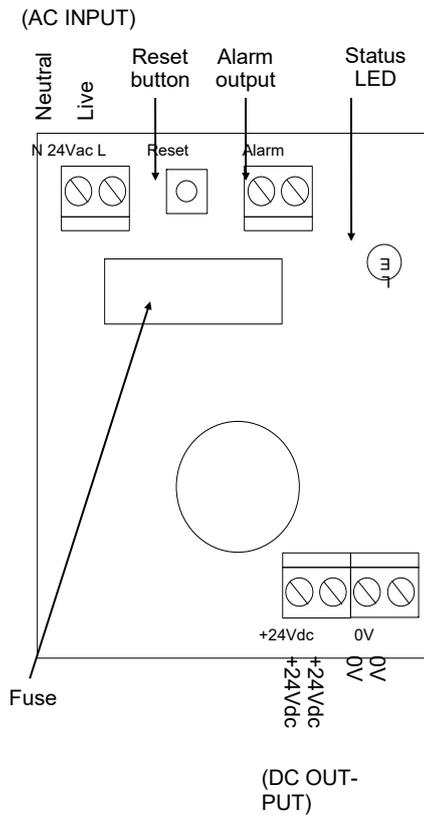

PS-24-24DC-E:

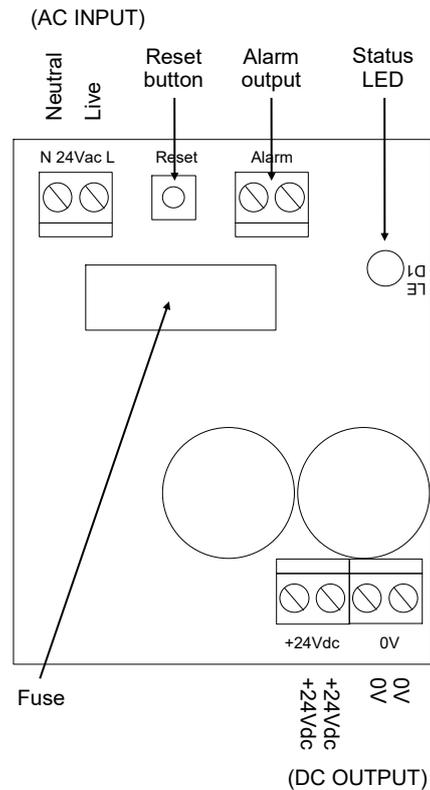

NB The 0V terminal on the AC input connector is directly connected to the 0V terminal on the DC output connector. If the DC 0V terminal is connected to equipment which will earth this connection the **0V of the AC input will be earthed at the same time.**

Care should be taken to ensure that earthing the AC supply 0V will not cause damage to any other equipment which may be powered from it.

Whilst every effort has been made to ensure the accuracy of this specification, Sontay cannot accept responsibility for damage, injury, loss or expense resulting from errors or omissions. In the interest of technical improvement, this specification may be altered without notice.